

Attachment table 14

Lift-truck states	The slope (unit : %)
basic no-load state in running	20
basic load state in running	15
Remark: 1. The “basic no-load state in running” referred in the table means the state that the telescopic arm is fully retracted to make the mast being vertical, the fork being level and the top of the lift being 30 centimeters above the ground. 2. The “basic load state in running” referred in the table means the state that the mast and the fork are in the maximum backward tilt.	